



About CIS chips

 
Most of Refillable cartridges are used auto reset chips(ARC), it can auto reset more than million times. The chip of black cartridge is the mother chip, it can controls all the chips of color cartridges. And the color chips are used the same design. You can swap them to use with each other in any color cartridges). Except special model CIS.

If the chips are loose after some crude deliveries, and show wrong information as below,



The black chip(mother chip) is error, so it shows all chips error. Please check the black chip loose or no. Reinstall CIS cartridges.

If you have done many times and it still shows this, you should contact the seller.





If it shows this, black chip is good, some color chips error.

It is a bad touch problem by delivery, you can solve it. Remove CIS cartridge, check the error chips as below.

Check loose chips




Some chip parts might be loosed in the delivery, so you need to push them in the right position.

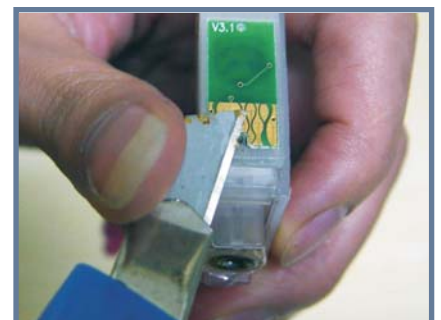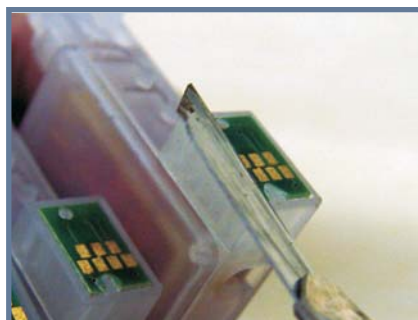

Some chip parts might be pressed to a lower position, you need to cut the higher mast by a knife.

Open all plugs,

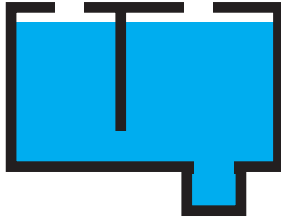

When filling inks
Open all plugs,
fill inks at both holes

Open the plug
that far from the nozzle



When printing
Open the plugs
that far from the nozzle




Note,
when printing.
The air will come into the cartridges,
Please do not close all holes



Change any brand cartridges, please
clean the printer 2-3 times on the
computer after using at the first time

Fill inks at first time

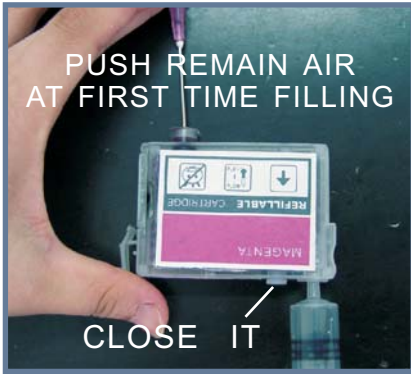

For EPN refillable cartridge: fill inks at first time (Do not need from second time)

 
If you fill ink into a empty cartridge, and you have finished filling as last step,
you need push out the remain air in the nozzle.

Close the plug of fill hole, place the cartridge flatly
Push the piston of nozzle by a needle, then push 2ml air on the air hole by a
syringe.
A less ink will run out from the nozzle.
Finished.

Please make it as this step, otherwise you need clean 4-6 time on the
computer after filling.

Reset the cartridges

For EPN printer



Fill full inks for 1 time, can reset the cartridge for 3 times

The ink will be showed less and less when printing, as the same as original cartridges.
The chips of refillable cartridge can auto reset when the printer show '0' capacity ink.
If after using for a long time ,the computer tells you to replace cartridge and the printer doesn't work,
Power off the printer for 1 minute, then restart ok.
**For some new model printers, before power off the printers,
need remove and reinstall the cartridges for 1 time**

For HPP printer

The ink will be showed less and less when printing, as the same as original cartridges.
The chips can auto reset to full inks when start the printer each time.
If after using for a long time ,the computer tells you to replace cartridge and the printer doesn't work,
Power off the printer for 1 minute, then restart it , ok.

For CAN printer

Please install the original chips into the refillable cartridges .
The chips need to be cut from the original cartridges
If after using for a long time ,the computer tells you to replace cartridge and the printer doesn't work,
, and the ink light lights.
press the button "paper" for 5 seconds, maybe need redo several times, then the light is off, all ok.

For BRO printer

If after using for a long time ,the computer tells you to replace cartridge and the printer
doesn't work, please refill the inks to full, then reinstall the cartridges again, and ok.